

TABLE OF CONTENTS



Chapter 1 - Introduction

Manual Overview	1-2
The Purpose of this Manual	1-2
Supplemental Manuals	1-2
Technical Support.....	1-2
Conventions Used	1-3
Key Topics for Each Chapter	1-3
D0-DCM Overview	1-4
Important Configuration Information & PLC Firmware Requirements.....	1-4
Hardware Features	1-4
Module Uses	1-4
DCM Application Examples	1-5
DirectNET Master or Slave	1-5
Additional Communications Port.....	1-6
Modbus RTU Master or Slave.....	1-7

Chapter 2 - Installation, Network Cabling and Module Specifications

Inserting the D0-DCM into the PLC	2-2
D0-DCM Module Installation	2-2
PLC Firmware and DirectSOFT Requirements.....	2-2
Building the Communication Cable	2-3
Consideration 1: Physical Configuration	2-3
Multi-drop – RS-422/485.....	2-3
Point to Point – RS-232.....	2-3
Consideration 2: Electrical Specification RS232C or RS422/485	2-4

Table of Contents

Consideration 3: Cable Schematics	2-4
Consideration 4: Cable Specifications	2-5
Consideration 5: Installation Guidelines	2-5
Wiring Diagrams	2-6
D0–DCM Port 2	2-7
RS-422 Network	2-7
Module Specifications	2-8
General Specifications	2-8
Port 1 Specifications	2-8
Port 2 Specifications	2-9

Chapter 3 - D0-DCM Module Setup

Important Module Configuration Information	3-2
Tip for <i>DirectSOFT</i> Users (optional)	3-2
Using <i>DirectSOFT</i> to Configure the DCM	3-3
<i>DirectSOFT</i> PLC>Menu>Setup	3-3
Select DCM Slot	3-3
Port 1 Configuration (slave only)	3-4
Port 2 Configuration (slave mode)	3-5
Port 2 Configuration (<i>DirectNET</i>)	3-6
Port 2 Configuration (Modbus Master)	3-7
Port 2 Configuration (Non-Sequence)	3-8
D0–DCM Port Configuration Registers	3-9
Module Configuration Registers	3-9
Default Communications Parameters	3-9
Parameter Descriptions	3-10
A: Port 1 – Transmit Mode, Protocol	3-11
B: Port 1 – Station Address, Baud Rate, Parity	3-12
C: Port 2 – RTS On/Off delay, Transmit Mode, Protocol, Comm Time-out, RS-485 Mode	3-13
D: Port 2 – Station Address, Baud Rate, Data Bit, Stop Bit, Parity	3-15
E: Port 2 – Character Time-out	3-16
F: Port 1 and 2 Setup and Completion Code	3-17
G: Port 1 and 2 Reset Time-out	3-17

Using Ladder Logic to Setup the D0-DCM (DL05).....3-18
 Port 1 Example: (This port is a slave only).....3-18
 Port 2 Example: Slave Mode.....3-18
 Port 2 Example: **DirectNet** Master3-19
 Port 2 Example: Modbus RTU Master3-19
 Port 2 Example: Non-Sequence Protocol.....3-20

Using ladder Logic to Setup the D0-DCM (DL06).....3-21
 Port 1 Example: Slave Mode Only3-21
 Port 2 Example: Slave Mode.....3-21
 Port 2 Example: **DirectNet** Master3-22
 Port 2 Example: Modbus RTU Master3-22
 Port 2 Example: Non-Sequence Protocol.....3-23

Chapter 4 - *DirectNet* Communications Using RX/WX

RX/WX Network Instructions4-2
 Read (RX) and Write (WX) Instructions4-2
 Building the Read (RX) and Write (WX) Routine.....4-2
 The First LD Instruction.....4-2
 The Second LD Instruction.....4-3
 The LDA Instruction4-3
 Read (WX) Instruction4-4
 Write (WX) Instruction.....4-4

Addressing the Different Memory Types.....4-5
 Bit Memory4-5
 Word Memory and Aliases4-5
 Available Data Types.....4-6
 DL05 CPU4-6
 DL06 CPU4-6

Special Relays for Communications.....4-7

Program with One RX Instruction.....4-8
 Program for the Master PLC.....4-8
 Program for the Slave PLC4-8

Example Program with One WX Instruction.....4-10
 Program for the Master PLC.....4-10
 Program for the Slave PLC4-10

Table of Contents

Integrating Multiple RX and WX Instructions	4-12
Interlocking Relays	4-12
First RX/WX Instruction	4-13
Second RX/WX Instruction	4-14
Third RX/WX Instruction	4-14
Shift Register	4-15
Store If Equal	4-15
First RX/WX Instruction	4-16
Second RX/WX Instruction	4-16
Third RX/WX Instruction	4-16

Chapter 5 - Modbus Communications RX/WX and MRX/MWX

Network Slave Operation	5-2
Modbus Function Codes Supported	5-2
Determining the Modbus Address	5-2
If Your Host Software or Master Requires the Data Type and Address	5-3
Example 1: V2100	5-5
Example 2: Y20	5-5
Example 3: T10 Current Value	5-5
Example 4: C54	5-6
If the Host Software or Client Requires an Address ONLY	5-6
Example 1: V2100	5-8
Example 2: Y20	5-8
Example 3: C54	5-8
Network Master Operation: RX/WX Instructions	5-9
Overview	5-9
PLC Memory Supported for Client Operation	5-11
Example 1: Calculating Word PLC Address	5-12
Example 2: Calculating Discrete Input PLC Address	5-12
Building the Read (RX) or Write (WX) Routine	5-13
Step 1: Identify ECOM Slot Location and Server Node #	5-13
Step 2: Load Number of Bytes to Transfer	5-14
Step 3: Specify Master Memory Area	5-14
Step 4: Specify Slave Memory Area	5-14
Communications from a Ladder Program	5-15
Multiple Read and Write Interlocks	5-15

Network Master Operation: DL06 MRX / MWX Instructions 5-16

- Modbus Read from Network (MRX)..... 5-16
- MRX Slave Memory Address..... 5-17
- MRX Master Memory Addresses..... 5-17
- MRX Number of Elements 5-17
- MRX Exception Response Buffer 5-17
- Modbus Write to Network (MWX) 5-18
- MWX Slave Memory Address 5-19
- MWX Master Memory Addresses..... 5-19
- MRX Number of Elements 5-19
- MRX Exception Response Buffer 5-19
- MRX/MWX Example in *DirectSOFT*..... 5-20
- Multiple Read and Write Interlocks 5-20

Chapter 6: DCM Using IBox Instructions

- Network Configuration Instruction (NETCFG)..... 6-2**
 - NETCFG IB-700..... 6-2
- Network Read Instruction (NETRX) 6-3**
 - NETRX IB-701 6-3
- Network Write Instruction (NETWX) 6-4**
 - NETWX IB-702..... 6-4
- Example Using NETCFG, NETRX and NETWX..... 6-5**