

# SURESTEP™

## STEPPING SYSTEMS

### USER MANUAL

## TABLE OF CONTENTS

---



Warnings .....	W-1
Chapter 1: Getting Started .....	1-1
Manual Overview .....	1-2
Overview of this Publication .....	1-2
Who Should Read this Manual .....	1-2
Technical Support .....	1-2
Special Symbols .....	1-2
SureStep™ System Introduction .....	1-3
SureStep™ Part Number Explanation .....	1-3
SureStep™ System Recommended Component Compatibility .....	1-5
Drive and Motor Compatibility .....	1-6
Microstepping Drives Introduction .....	1-9
Standard Microstepping Drives .....	1-9
High Bus Voltage Microstepping Drives .....	1-11
Advanced Microstepping Drive .....	1-12
Standard Integrated Motors/Drives .....	1-13
Advanced Integrated Motors/Drives .....	1-14
Step Motor Introduction .....	1-15
Stepping System Power Supply Introduction .....	1-16
Selecting the Stepping System .....	1-17
Use with AutomationDirect PLCs .....	1-17
High-Speed Pulse Output Control (Standard Drives) .....	1-17
Serial Communication Control (Advanced Drives) .....	1-17
Chapter 2: SureStep STP-DRV-4830,-4845,-6575 Standard DC	
Microstepping Drive .....	2-1
Features .....	2-2
Specifications .....	2-3
Typical Wiring Diagram .....	2-5
Wiring Connections and Configuration Switches .....	2-5

STP-DRV-4830 .....	2-5
STP-DRV-4845 and STP-DRV-6575 .....	2-6
Connecting the Motor .....	2-7
Connecting the Power Supply .....	2-8
SureStep™ Drive Digital Inputs and Outputs .....	2-9
Connecting the Input Signals: STEP and DIR .....	2-9
Connecting the Input Signals – EN Input .....	2-10
Connecting the Fault Output .....	2-11
Drive Configuration .....	2-12
Drive Configurations Settings .....	2-12
DIP Switch Settings .....	2-13
Alarm Codes .....	2-16
Mounting the Drive .....	2-19
Drive Heating .....	2-19
Dimensions and Mounting Slot Locations .....	2-19
STP-DRV-4830 .....	2-19
STP-DRV-4845 and STP-DRV-6575 .....	2-20
<b>Chapter 3: SureStep STP-DRV-4035 Microstepping Drive .....</b>	<b>3-1</b>
Features .....	3-2
Specifications .....	3-3
Typical Wiring Diagram .....	3-4
Connection and Adjustment Locations .....	3-4
Connecting the Motor .....	3-5
Connecting the Power Supply .....	3-6
Connecting the Logic .....	3-7
Using Logic That is Not 5 volt TTL Level .....	3-9
The Enable Input .....	3-9
Setting Phase Current .....	3-10
Current Setting Formula .....	3-10
Current Setting Table .....	3-11
Microstepping .....	3-12
Idle Current Reduction .....	3-13
Self Test .....	3-13
Dimensions .....	3-15
<b>Chapter 4: SureStep Advanced Microstepping Drives .....</b>	<b>4-1</b>
Features .....	4-2
Specifications .....	4-3
Typical Wiring Diagram .....	4-4

Connection Locations & Pin-out .....	4-4
Connecting the Power Supply .....	4-6
Connecting the I/O .....	4-7
SureStep™ Drive Digital Inputs .....	4-7
Connecting STEP and DIR to 5V TTL Logic .....	4-7
Connecting STEP and DIR to Logic Other Than 5V TTL Level .....	4-8
Connections to the EN Input .....	4-9
Connecting the Analog Input .....	4-10
Connecting the Digital Output .....	4-10
LED Display Codes .....	4-12
Drive Configuration .....	4-15
Mounting the Drive .....	4-17
Drive Heating .....	4-17
Dimensions and Mounting Slot Locations .....	4-17
<b>Chapter 5: SureStep STP-DRVAC-24025 Microstepping Drive .....</b>	<b>5-1</b>
Features .....	5-2
Specifications .....	5-3
Mounting the Drive .....	5-4
Dimensions .....	5-4
Wiring Connections and Configuration Switches .....	5-5
STP-DRVAC-24025 .....	5-5
Connecting the Power Supply .....	5-6
Connecting the Motor .....	5-7
Selecting the Motor .....	5-8
Connecting the I/O .....	5-9
Step/Direction Mode and CW/CCW Mode Jumper .....	5-9
Connecting the Input Signals - Step and Direction .....	5-9
The Enable Input .....	5-10
Connecting the Fault Output Setting .....	5-11
Drive Configuration .....	5-12
Microstepping .....	5-13
Setting Running Current .....	5-13
Idle Current Reduction .....	5-14
Step Noise Filter .....	5-14
Load Inertia .....	5-14
Smoothing Filter .....	5-14
Self Test .....	5-15
Alarm Codes .....	5-16

Chapter 6: SureStep Integrated Motors/Drives.....	6-1
Features .....	6-3
General Features:.....	6-3
Standard Drive Features .....	6-3
Advanced Drive Features .....	6-3
Features Comparison .....	6-4
Specifications .....	6-5
Getting Started .....	6-11
Installing Software .....	6-11
Mounting .....	6-11
Additional Reading.....	6-12
Mating Connectors and Accessories .....	6-12
Using a Regulated Power Supply .....	6-17
LED Error Codes .....	6-18
STP-MTRD Inputs and Outputs .....	6-22
Input/Output Functions .....	6-25
The Step (STEP) and Direction (DIR) Inputs.....	6-26
The Enable (EN/IN3) Digital Input.....	6-28
The Analog (AIN) Input .....	6-29
The Digital Output .....	6-30
Using the Optional Encoder.....	6-31
Configuring the Standard STP-MTRD .....	6-32
Drive/Motor Heating .....	6-37
Torque Speed Graphs .....	6-40
Dimensions and Mounting Slot Locations .....	6-43
Chapter 7: SureStep Stepping Motors.....	7-1
Features .....	7-2
Design and Installation Tips .....	7-3
Specifications .....	7-4
Power Supply and Step Motor Drive .....	7-8
Mounting the Motor.....	7-8
Connecting the Motor .....	7-8
Extension Cable Wiring Diagrams.....	7-9
Connecting a STP-MTRAC-23x or STP-MTRAC-34x Motor .....	7-10
Connecting a STP-MTRAC(H)-42 Motor.....	7-11
Motor Dimensions and Cabling.....	7-12
Typical Dimension & Cable Diagrams .....	7-12
Typical Dimension & Cable Diagram for STP-MTRH.....	7-15

Typical Dimension & Cable Diagram for STP-MTRAC.....	7-18
Typical Dimension & Cable Diagram for STP-MTRAC(H)-42x.....	7-20
Torque vs. Speed Charts.....	7-21
<b>Chapter 8: SureStep Linear Actuators.....</b>	<b>8-1</b>
Features.....	8-2
Design and Installation Tips.....	8-3
Model Number Explanation.....	8-3
Specifications.....	8-4
Power Supply and Step Motor Drive.....	8-8
Mounting the Motor.....	8-8
Journal Mounting.....	8-8
Connecting the Motor.....	8-10
Extension Cable Wiring Diagrams.....	8-10
Motor Dimensions and Cabling.....	8-12
Thrust vs. Speed Charts.....	8-16
<b>Chapter 9: SureStep System Power Supplies.....</b>	<b>9-1</b>
Features.....	9-2
Specifications.....	9-3
Drive Heating.....	9-4
Choosing a Power Supply.....	9-5
Power Supply Terminal & Component Layout.....	9-7
Mounting the Power Supply.....	9-8
Dimensions.....	9-9
Dimensions (continued).....	9-10
<b>Chapter 10: SureMotion Pro Configuration Software.....</b>	<b>10-1</b>
<b>SureMotion™ Pro Software.....</b>	<b>10-2</b>
Communication.....	10-2
Motor Configuration.....	10-2
Motion and I/O.....	10-3
Drive Pull-down Menu.....	10-4
<b>Chapter 11: SureStep Communications.....</b>	<b>11-1</b>
Connecting to a Host Using RS-485.....	11-2
Four-Wire Configuration.....	11-2
Two-Wire Configuration.....	11-3
Assigning RS-485 Addresses.....	11-3
Connecting to an STP-MTRD-xxxxR using the STP-USB485-4W Adapter.....	11-4
Connecting to a drive using RJ12.....	11-5

Appendix A: Accessories .....	A-1
Braking Accessories .....	A-2
Regeneration Clamp Features .....	A-2
Cables and Accessories .....	A-5
Encoder Options .....	A-10
Encoder Mounting Accessories .....	A-15
Encoder Specifications .....	A-16
Differential Electrical Specifications .....	A-18
Wiring Examples .....	A-19
Line Filters .....	A-24
Appendix B: Using SureStep with AutomationDirect PLCs .....	B-1
Compatible AutomationDirect PLCs and Modules .....	B-2
Typical Connections to a Productivity PLC .....	B-6
Typical Connections to a DL05 PLC .....	B-7
Typical Connections to an H0-CTRIO .....	B-8
Typical Connections – Multiple Drives/Motors .....	B-9
Typical <i>Direct</i> LOGIC PLC RS-232	
Serial Connections to an Advanced SureStep Drive .....	B-10
Typical CLICK, P-Series, & BRX PLC RS-232	
Serial Connections to an Advanced SureStep Drive .....	B-11
Typical RS-485 Connections to	
Integrated Motor/Drives .....	B-12
Appendix C: Selecting the SureStep Stepping System .....	C-1
Selecting the SureStep™ Stepping System .....	C-2
The Selection Procedure .....	C-2
How many pulses from the PLC to make the move? .....	C-2
What is the positioning resolution of the load? .....	C-3
What is the indexing speed to accomplish the move time? .....	C-3
Calculating the Required Torque .....	C-4
Leadscrew – Example Calculations .....	C-8
Step 1 – Define the Actuator and Motion Requirements .....	C-8
Step 2 – Determine the Positioning Resolution of the Load .....	C-9
Step 3 – Determine the Motion Profile .....	C-9
Step 4 – Determine the Required Motor Torque .....	C-9
Step 5 – Select & Confirm the Stepping Motor & Driver System .....	C-10
Belt Drive – Example Calculations .....	C-15
Step 1 – Define the Actuator and Motion Requirements .....	C-15
Step 2 – Determine the Positioning Resolution of the Load .....	C-16

Step 3 – Determine the Motion Profile .....	C-16
Step 4 – Determine the Required Motor Torque.....	C-16
Step 5 – Select & Confirm the Stepping Motor & Driver System .....	C-17
Index Table – Example Calculations .....	C-19
Step 1 – Define the Actuator and Motion Requirements.....	C-19
Step 2 – Determine the Positioning Resolution of the Load .....	C-19
Step 3 – Determine the Motion Profile .....	C-20
Step 4 – Determine the Required Motor Torque.....	C-20
Step 5 – Select & Confirm the Stepping Motor & Driver System .....	C-21
Engineering Unit Conversion Tables, Formulae, & Definitions: .....	C-22

BLANK  
PAGE