



Protected AC Output Module (Catalog Number 1771-OP)

To The Installer

This document provides information on:

To	See page
↓ Important User Information	1
↓ Pre-installation Considerations	4
↓ Calculate Power Requirements	4
↓ Determine Module Placement	4
↓ Prevent Electrostatic Discharge	5
↓ Key the Backplane Connector	5
↓ Install the Module and Field Wiring Arm	6
↓ Connect Wiring to the Module	6
For this reference information	See page
➡ Interpreting the Status Indicators	9
➡ Replacing a Fuse	10
➡ Specifications	11

Important User Information

Because of the variety of uses for the products described in this publication, those responsible for the application and use of these products must satisfy themselves that all necessary steps have been taken to assure that each application and use meets all performance and safety requirements, including any applicable laws, regulations, codes and standards. In no event will Rockwell Automation be responsible or liable for indirect or consequential damage resulting from the use or application of these products.

Any illustrations, charts, sample programs, and layout examples shown in this publication are intended solely for purposes of example. Since there are many variables and requirements associated with any particular installation, Rockwell Automation does not assume responsibility or liability (to include intellectual property liability) for actual use based upon the examples shown in this publication.

Allen–Bradley publication SGI–1.1, Safety Guidelines for Application, Installation, and Maintenance of Solid–State Control (available from your local Rockwell Automation office), describes some important differences between solid–state equipment and electromechanical devices that should be taken into consideration when applying products such as those described in this publication.

Reproduction of the contents of this copyrighted publication, in whole or part, without written permission of Rockwell Automation, is prohibited.

Throughout this publication, notes may be used to make you aware of safety considerations. The following annotations and their accompanying statements help you to identify a potential hazard, avoid a potential hazard, and recognize the consequences of a potential hazard.

WARNING

Identifies information about practices or circumstances that can cause an explosion in a hazardous environment, which may lead to personal injury or death, property damage, or economic loss.

ATTENTION

Identifies information about practices or circumstances that may lead to personal injury or death, property damage, or economic loss.

IMPORTANT

Identifies information that is critical for successful application and understanding of the product.

ATTENTION**Environment and Enclosure**

This equipment is intended for use in a Pollution Degree 2 industrial environment, in overvoltage Category II applications (as defined in IEC publication 60664–1), at altitudes up to 2000 meters without derating.

This equipment is considered Group 1, Class A industrial equipment according to IEC/CISPR Publication 11. Without appropriate precautions, there may be potential difficulties ensuring electromagnetic compatibility in other environments due to conducted as well as radiated disturbance.

This equipment is supplied as “open type” equipment. It must be mounted within an enclosure that is suitably designed for those specific environmental conditions that will be present, and appropriately designed to prevent personal injury resulting from accessibility to live parts. The interior of the enclosure must be accessible only by the use of a tool. Subsequent sections of this publication may contain additional information regarding specific enclosure type ratings that are required to comply with certain product safety certifications.

See NEMA Standards publication 250 and IEC publication 60529, as applicable, for explanations of the degrees of protection provided by different types of enclosures. Also, see the appropriate sections in this publication, as well as the Allen–Bradley publication 1770–4.1, (“Industrial Automation Wiring and Grounding Guidelines”), for additional installation requirements pertaining to this equipment.

Pre-installation Considerations

An output can drive an Allen–Bradley Size 5 motor starter, provided its supply voltage does not drop below 92V ac. The maximum load current the module can deliver is 2A per channel, not to exceed 6A total per module.

ATTENTION

When using a remote I/O system with a PLC processor, use only the 1771-AS or 1771-AR remote I/O adapter module which is series B or later. These remote I/O adapters add additional capability for shorted data bus detection. Failure to use series B or later remote I/O adapters may result in damage to equipment and/or personal injury.

Calculate Power Requirements

The output module is powered by the power supply connected to the I/O chassis backplane. The module requires a maximum current of 210mA from the +5V dc output of this supply. Total the current requirements of this module with the other modules in the I/O chassis to avoid overloading the supply or the I/O chassis backplane.

Determine Module Placement

Group your modules to minimize adverse effects from radiated electrical noise and/or heat. We recommend the following:

- Group analog input and low voltage dc modules away from ac modules or high voltage dc modules to minimize electrical noise interference.
- Place analog input modules and other I/O modules sensitive to heat away from slot power supplies and rack controllers to minimize adverse heat effects.

The 1771–OP module is a modular component of the 1771 I/O system requiring a properly installed system chassis. Refer to publication 1771–IN075 for detailed information on acceptable chassis, proper installation and grounding requirements. Limit the maximum adjacent slot power dissipation to 10W maximum.

ATTENTION**Preventing Electrostatic Discharge**

This equipment is sensitive to electrostatic discharge, which can cause internal damage and affect normal operation. Follow these guidelines when you handle this equipment:

- Touch a grounded object to discharge potential static.
- Wear an approved grounding wriststrap.
- Do not touch connectors or pins on component boards.
- Do not touch circuit components inside the equipment.
- If available, use a static-safe workstation.
- When not in use, keep modules in appropriate static-safe packaging.

Key the Backplane Connector

Place your module in any slot in the chassis except the leftmost slot which is reserved for processors or adapters.

ATTENTION

Observe the following precautions when inserting or removing keys:




- insert or remove keys with your fingers
- make sure that key placement is correct

Incorrect keying or the use of a tool can result in damage to the backplane connector and possible system faults.

Position the keying bands in the backplane connectors to correspond to the key slots on the module.

Place the keying bands:

- between 6 and 8
- between 26 and 28

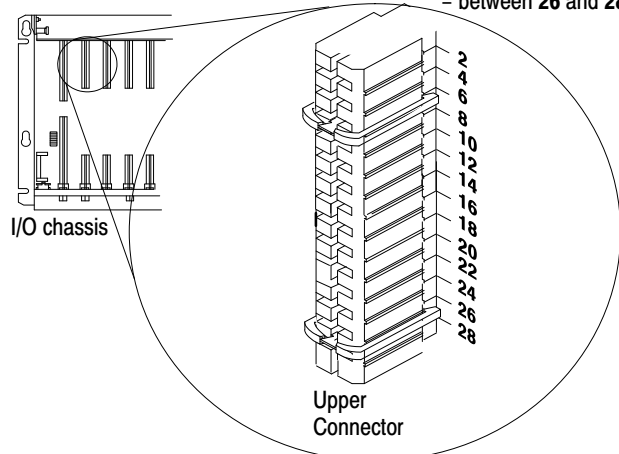

You can change the position of these bands if subsequent system design and rewiring makes insertion of a different type of module necessary.

11022-1

Install the Module and Field Wiring Arm

ATTENTION



Remove power from the 1771 I/O chassis backplane and wiring arm before removing or installing an I/O module.

- Failure to remove power from the backplane or wiring arm could cause module damage, degradation of performance, or injury.
- Failure to remove power from the backplane could cause injury or equipment damage due to possible unexpected operation.

1 1771-A1B, -A2B, -A3B, -A3B1, -A4B I/O chassis

locking tab

card guides

Module

Snap the chassis latch over the top of the module to secure it.

1771-A1B, -A2B, -A3B1, -A4B Series B I/O chassis

locking bar pin

locking bar

card guides

Module

Swing the chassis locking bar down into place to secure the modules. Make sure the locking pins engage.

19809

2 Attach the wiring arm (1771-WA) to the horizontal bar at the bottom of the I/O chassis.

The wiring arm pivots upward and connects with the module so you can install or remove the module without disconnecting the wires.

wiring arm

1771-WA

horizontal bar

remove

install

17643

Connect Wiring to the Module

You make connections to the module through the 1771-WA field wiring arm shipped with the module. The arm pivots on the chassis to connect with the 8 terminals on the front of the module. The wiring arm allows the module to be removed from the chassis without disconnecting wiring.


1. Make certain all power is removed from the module before making wiring connections.
2. Swing the wiring arm up into position on the front of the module. The locking tab on the module will secure it into place.
3. Make your connections to the field wiring arm as shown in Figure 1. (Use the label on the front of the wiring arm to identify your wiring.)

IMPORTANT

The field wiring arm terminal identification number is not the same as the number of the bit which controls that output.

You should identify the labels on the wiring arm with the name or number of the device connected at each terminal.

Figure 1
Connection Diagram for the 1771-OP Protected Output Module

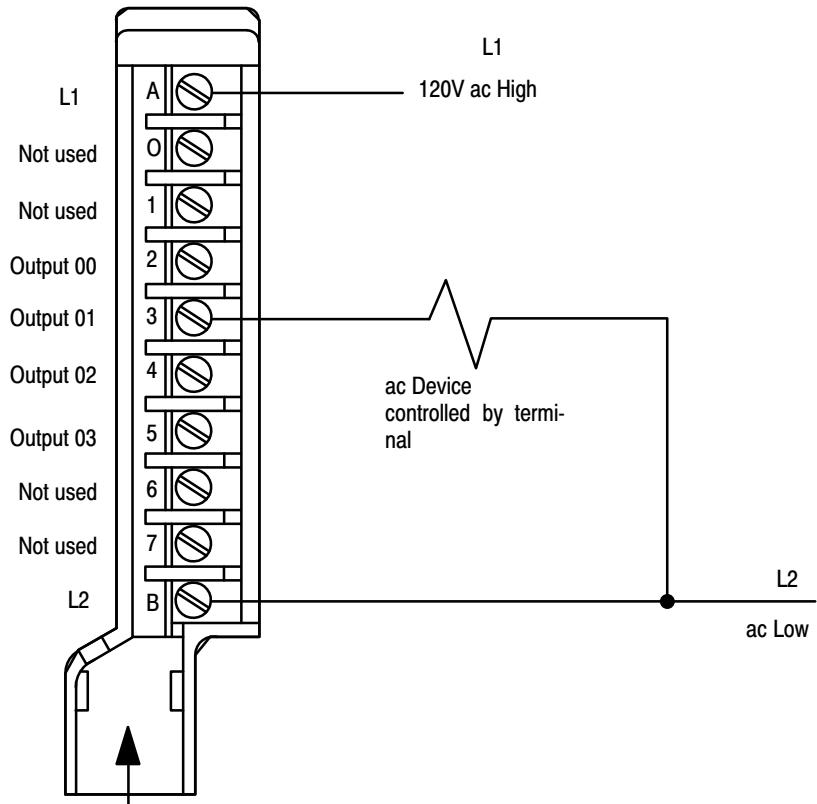

(Actual wiring runs in this direction.)

11884-I

Connect the high side of incoming power to the L1 terminal, and the low side to the L2 terminal.


ATTENTION

Paralleling outputs may result in damage to the module.



You can use an output of the 1771-OP module to drive an input of a 120V AC input module (1771-IA, -IA2, -ID and -IAD) to indicate status, such as the turning on a motor starter (Figure 2). Both modules must be powered by the same ac source. In addition, you must add an external resistor between the output terminal and the common (L2) (Figure 2). Typically, this is a 2.5K ohm, 10W resistor.

Figure 2
Using an Output Module to drive an Input Module

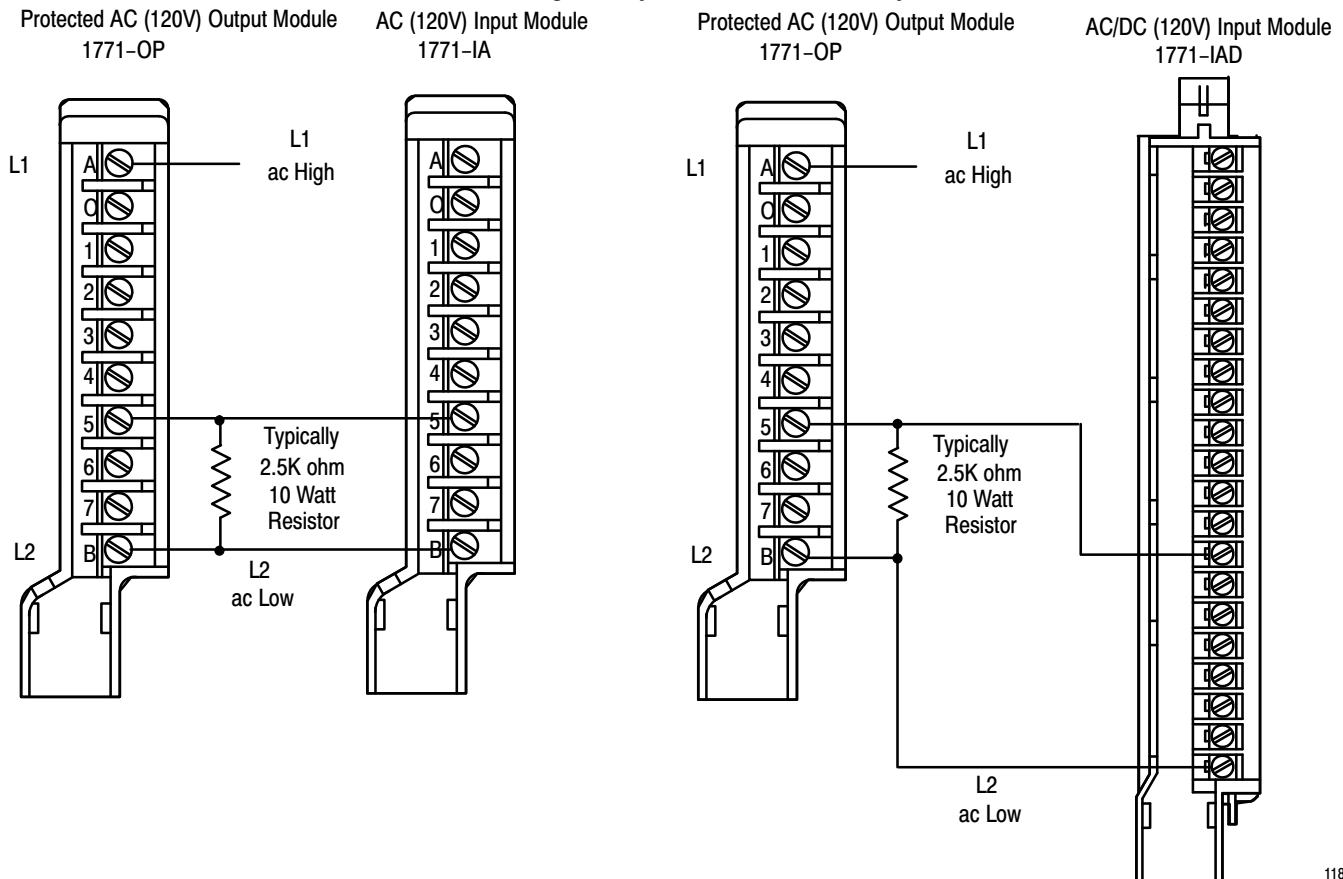

11885-1


Interpreting the Status Indicators

The module has 4 status indicators (Figure 3) that show the state of each output. These indicators light when their corresponding outputs are energized.

The module also has an indicator that displays a blown-fuse condition at the respective output regardless of the state of the output. This indicator is driven by your field device power supply. The module also has a triac failure indicator. If this light comes on, return the module to the factory for repair.

Indicator	Color	Explanation	Condition
TRIAC FAIL	Red	Illuminates when one of the triacs has failed shorted and causes the output fuse to open.	Normally off
FUSE BLOWN	Red	Illuminates when an output fuse has opened.	Normally off
OUTPUT (4 total; one per output)	Red	Show on/off state of outputs. When the output is on, the associated indicator is on.	On or off, as determined by the state of the output.

Figure 3
Status Indicators

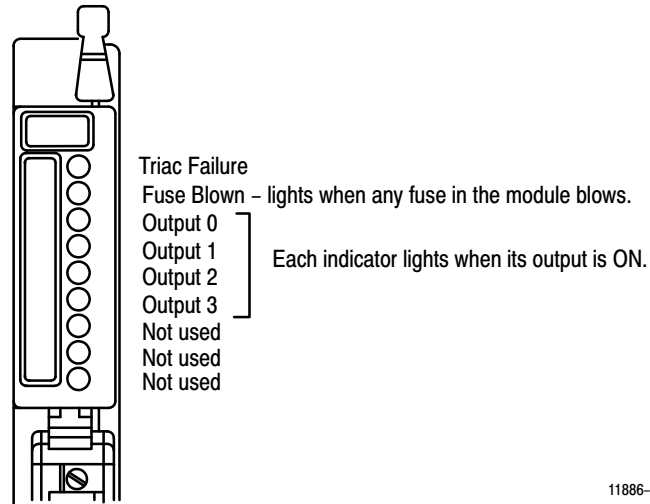

11886-I

Replacing a Fuse

The output of this module is fused to open the output circuit under an overload or a shorted output triac condition. You can easily access the module fuse by removing the front component-side cover.

ATTENTION

Remove power from the 1771 I/O chassis backplane and wiring arm before removing or installing the module.

- Failure to remove power from the backplane or field wiring arm could cause module damage, degradation of performance, or injury.
 - Failure to remove power from the backplane could cause injury or equipment damage due to possible unexpected operation.
-

If a blown fuse occurs:

1. Turn off power to the I/O chassis backplane.
2. Pivot the wiring arm away from the module and pull the module from the I/O chassis.
3. Remove the front half of the protective cover from the unlabeled side of the module by removing the two slotted screws.
4. Replace the blown fuse with a 5A, 250V Bussman MTH5, IEC 127 Type F fuse.
5. Replace the protective cover and install the module in the I/O chassis.
6. Reposition the wiring arm.
7. Restart system power.

Specifications

Outputs per Module	8
Module Location	1771 I/O chassis
Output Voltage Range	92 to 138V ac @ 47 – 63Hz
Output Current Rating	1.5A per output – not to exceed 6A per module
Surge Current (maximum)	4A per output for 8.3ms at 120V ac, repeatable every 1s
Minimum Load Current	50mA per output @ 120V ac, 60Hz
On State Voltage Drop	2V at 100mA
Off State Leakage Current (max.)	5mA per output @ 120V ac
Power Dissipation	10.7 Watts (max.), 1.1 Watts (min.)
Thermal Dissipation	36.6 BTU/hr (max.), 3.4 BTU/hr (min.)
Adjacent Slot Power Dissipation	10 Watts maximum
Backplane Current	210mA @ 5V dc 5%
Opto–electrical Isolation	Tested to 1500V ac rms for 1s
Environmental Conditions	
Operational Temperature	IEC 60068–2–1 (Test Ad, Operating Cold) IEC 60068–2–2 (Test Bd, Operating Dry Heat) IEC 60068–2–14 (Test Nb, Operating Thermal Shock) 32 to 140°F (0 to 60°C)
Storage Temperature	IEC 60068–2–1 (Test Ab, Unpackaged, Nonoperating Cold) IEC 60068–2–2 (Test Bb, Unpackaged, Nonoperating Dry Heat) IEC 60068–2–14 (Test Na, Unpackaged, Nonoperating Thermal Shock) –40 to 185°F (–40 to 85°C)
Relative Humidity	IEC 60068–2–30 (Test Db, Unpackaged, Nonoperating Damp Heat) 5 to 95% noncondensing
Shock Operating Nonoperating	IEC 60068–2–27 (Test Ea, Unpackaged Shock) 30g 50g
Vibration	IEC 60068–2–6 (Test Fc, Operating) 2g @ 10–500Hz
Enclosure Type Rating	None (open style)
Keying	Between 6 and 8 Between 26 and 28
Fuses	5A, 250V Bussman MTH5, IEC 127 Type F
Field Wiring Arm	Cat. No. 1771–WA
Field Wiring Arm Screw Torque	7–9 pound–inches (0.7–1.0Nm)
Conductors	Wire Size 14–22AWG (2.5–0.25mm ²) stranded copper wire rated at 75°C or greater ¹ 3/64 inch (1.2mm) insulation (max) Category 1 ²
Certifications (when product is marked)	UL UL Listed Industrial Control Equipment CSA CSA Certified Process Control Equipment

¹ One or two 14–22 AWG solid or stranded copper wires per terminal. Must be same size. Do not intermix solid and stranded wires. Use copper wire only.

² Use this conductor category information for planning conductor routing. Refer to publication 1770-4.1, "Industrial Automation Wiring and Grounding Guidelines."

www.rockwellautomation.com

Power, Control and Information Solutions Headquarters

Americas: Rockwell Automation, 1201 South Second Street, Milwaukee, WI 53204-2496 USA, Tel: (1) 414.382.2000, Fax: (1) 414.382.4444

Europe/Middle East/Africa: Rockwell Automation, Vorstlaan/Boulevard du Souverain 36, 1170 Brussels, Belgium, Tel: (32) 2 663 0600, Fax: (32) 2 663 0640

Asia Pacific: Rockwell Automation, Level 14, Core F, Cyberport 3, 100 Cyberport Road, Hong Kong, Tel: (852) 2887 4788, Fax: (852) 2508 1846