

**Allen-Bradley Data Highway
Switch Settings
Communications Adapter Module
Cat. No. 1771-KA2**

No. 3 — Shutdown/automatic restart

- On — Shuts down module
- Off — Automatically restarts itself

Series A Revision D and after:
No. 3 — Execute download in Run Program

- On — Allow downloading
- Off — Does not allow downloading

No. 1 — Receive protected commands

- On — Enabled
- Off — Disabled

No. 5 — Send unprotected commands

- On — Enabled
- Off — Disabled

No. 2 — Receive unprotected commands

- On — Enabled
- Off — Disabled

No. 4 — Receive privileged write



- On — Enabled
- Off — Disabled

No. 6 — Processor (PLC) link baud rate

- On — PLC-2/30 processor or Mini-Processor Module
- Off — PLC-2 Processor

Instructions: Use a pencil to darken switches to show proper settings as shown. Keep this form where it can be easily referenced.

Example

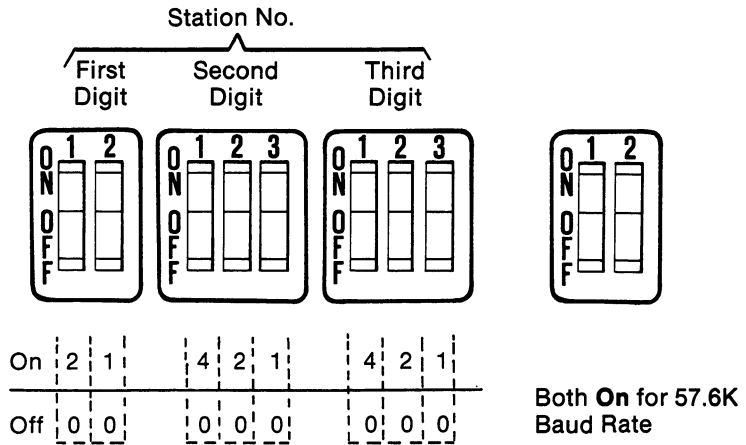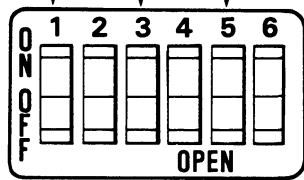

Switch Locations

