



## POINT I/O Module with 8 Configurable 24V DC Points and DeviceLogix

Catalog Number 1734-8CFGDLX

Topic	Page
Summary of Changes	1
Before You Begin	3
Install the Mounting Base	4
Install the Module	5
Install the Removable Terminal Block	6
Remove a Mounting Base	7
Wire the Module	7
Communicate with Your Module	8
Interpret the Status Indicators	11
Specifications	12
Additional Resources	13

### Summary of Changes

This publication contains the following new or updated information. This list includes substantive updates only and is not intended to reflect all changes.

Topic	Page
Updated module component descriptions	4, 4
Updated General Specifications	12
Updated Certifications	13



**ATTENTION:** Read this document and the documents listed in the Additional Resources section about installation, configuration and operation of this equipment before you install, configure, operate or maintain this product. Users are required to familiarize themselves with installation and wiring instructions in addition to requirements of all applicable codes, laws, and standards.

Activities including installation, adjustments, putting into service, use, assembly, disassembly, and maintenance are required to be carried out by suitably trained personnel in accordance with applicable code of practice. If this equipment is used in a manner not specified by the manufacturer, the protection provided by the equipment may be impaired.

注意：在安装、配置、操作和维护本产品前，请阅读本文档以及“其他资源”部分列出的有关设备安装、配置和操作的相应文档。除了所有适用规范、法律和标准的相关要求之外，用户还必须熟悉安装和接线说明。

安装、调整、投运、使用、组装、拆卸和维护等各项操作必须由经过适当训练的专业人员按照适用的操作规范实施。

如果未按照制造商指定的方式使用该设备，则可能会损害设备提供的保护。

**ATENCIÓN:** Antes de instalar, configurar, poner en funcionamiento o realizar el mantenimiento de este producto, lea este documento y los documentos listados en la sección Recursos adicionales acerca de la instalación, configuración y operación de este equipo. Los usuarios deben familiarizarse con las instrucciones de instalación y cableado y con los requisitos de todos los códigos, leyes y estándares vigentes.

El personal debidamente capacitado debe realizar las actividades relacionadas a la instalación, ajustes, puesta en servicio, uso, ensamblaje, desensamblaje y mantenimiento de conformidad con el código de práctica aplicable. Si este equipo se usa de una manera no especificada por el fabricante, la protección provista por el equipo puede resultar afectada.

**ATENÇÃO:** Leia este e os demais documentos sobre instalação, configuração e operação do equipamento que estão na seção Recursos adicionais antes de instalar, configurar, operar ou manter este produto. Os usuários devem se familiarizar com as instruções de instalação e fiação além das especificações para todos os códigos, leis e normas aplicáveis.

É necessário que as atividades, incluindo instalação, ajustes, colocação em serviço, utilização, montagem, desmontagem e manutenção sejam realizadas por pessoal qualificado e especializado, de acordo com o código de prática aplicável.

Caso este equipamento seja utilizado de maneira não estabelecida pelo fabricante, a proteção fornecida pelo equipamento pode ficar prejudicada.

**ВНИМАНИЕ:** Перед тем как устанавливать, настраивать, эксплуатировать или обслуживать данное оборудование, прочитайте этот документ и документы, перечисленные в разделе «Дополнительные ресурсы». В этих документах изложены сведения об установке, настройке и эксплуатации данного оборудования. Пользователи обязаны ознакомиться с инструкциями по установке и прокладке соединений, а также с требованиями всех применимых норм, законов и стандартов.

Все действия, включая установку, наладку, ввод в эксплуатацию, использование, сборку, разборку и техническое обслуживание, должны выполняться обученным персоналом в соответствии с применимыми нормами и правилами.

Если оборудование используется не предусмотренным производителем образом, защита оборудования может быть нарушена.

注意：本製品を設置、構成、稼働または保守する前に、本書および本機器の設置、設定、操作についての参考資料の該当箇所に記載されている文書に目を通してください。ユーザーは、すべての該当する条例、法律、規格の要件に加えて、設置および配線の手順に習熟している必要があります。

設置調整、運転の開始、使用、組立て、解体、保守を含む諸作業は、該当する実施規則に従って訓練を受けた適切な作業員が実行する必要があります。

本機器が製造メーカーにより指定されていない方法で使用されている場合、機器により提供されている保護が損なわれる恐れがあります。

**ACHTUNG:** Lesen Sie dieses Dokument und die im Abschnitt „Weitere Informationen“ aufgeführten Dokumente, die Informationen zu Installation, Konfiguration und Bedienung dieses Produkts enthalten, bevor Sie dieses Produkt installieren, konfigurieren, bedienen oder warten. Anwender müssen sich neben den Bestimmungen aller anwendbaren Vorschriften, Gesetze und Normen zusätzlich mit den Installations- und Verdrahtungsanweisungen vertraut machen.

Arbeiten im Rahmen der Installation, Anpassung, Inbetriebnahme, Verwendung, Montage, Demontage oder Instandhaltung dürfen nur durch ausreichend geschulte Mitarbeiter und in Übereinstimmung mit den anwendbaren Ausführungsvorschriften vorgenommen werden.

Wenn das Gerät in einer Weise verwendet wird, die vom Hersteller nicht vorgesehen ist, kann die Schutzfunktion beeinträchtigt sein.

**ATTENTION:** Lisez ce document et les documents listés dans la section Ressources complémentaires relatifs à l'installation, la configuration et le fonctionnement de cet équipement avant d'installer, configurer, utiliser ou entretenir ce produit. Les utilisateurs doivent se familiariser avec les instructions d'installation et de câblage en plus des exigences relatives aux codes, lois et normes en vigueur. Les activités relatives à l'installation, le réglage, la mise en service, l'utilisation, l'assemblage, le démontage et l'entretien doivent être réalisées par des personnes formées selon le code de pratique en vigueur.

Si cet équipement est utilisé d'une façon qui n'a pas été définie par le fabricant, la protection fournie par l'équipement peut être compromise.

주의：본 제품 설치, 설정, 작동 또는 유지 보수하기 전에 본 문서를 포함하여 설치, 설정 및 작동에 관한 참고 자료 섹션의 문서들을 반드시 읽고 숙지하십시오. 사용자는 모든 관련 규정, 법규 및 표준에서 요구하는 사항에 대해 반드시 설치 및 배선 지침을 숙지해야 합니다.

설치, 조정, 가동, 사용, 조립, 분해, 유지보수 등 모든 작업은 관련 규정에 따라 적절한 교육을 받은 사용자가 통해서만 수행해야 합니다.

설치비를 제조사가 명시하지 않은 방법으로 사용하면 장비의 보호 기능이 손상될 수 있습니다.

**ATTENZIONE** Prima di installare, configurare ed utilizzare il prodotto, o effettuare interventi di manutenzione su di esso, leggere il presente documento ed i documenti elencati nella sezione "Altre risorse", riguardanti l'installazione, la configurazione ed il funzionamento dell'apparecchiatura. Gli utenti devono leggere e comprendere le istruzioni di installazione e cablaggio, oltre ai requisiti previsti dalle leggi, codici e standard applicabili.

Le attività come installazione, regolazioni, utilizzo, assemblaggio, disassemblaggio e manutenzione devono essere svolte da personale adeguatamente addestrato, nel rispetto delle procedure previste. Qualora l'apparecchio venga utilizzato con modalità diverse da quanto previsto dal produttore, la sua funzione di protezione potrebbe venire compromessa.

**DİKKAT:** Bu ürünün kurulumu, yapılandırılması, işletilmesi veya bakımı öncesinde bu dokümanı ve bu ekipmanın kurulumu, yapılandırılması ve işletimi ile ilgili ilave Kaynaklar bölümünde yer listelenmiş dokümanları okuyun. Kullanıcılar yürürlükteki tüm yönetmelikler, yasalar ve standartların gereksinimlerine ek olarak kurulum ve kablolama talimatlarını da öğrenmek zorundadır.

Kurulum, ayarlama, hizmete alma, kullanma, parçaları birleştirme, parçaları sökme ve bakım gibi aktiviteler sadece uygun eğitimleri almış kişiler tarafından yürürlükteki uygulama yönetmeliklerine uygun şekilde yapılabilir.

Bu ekipman üretici tarafından belirlenmiş amacın dışında kullanılırsa, ekipman tarafından sağlanan koruma bozulabilir.

注意事項：在安装、設定、操作或維護本產品前，請先閱讀此文件以及列於「其他資源」章節中有關安裝、設定與操作此設備的文件。使用者必須熟悉安裝和配線指示，並符合所有法規、法律和標準要求。

包括安裝、調整、交付使用、使用、組裝、拆卸和維護等動作都必須交由已經適當訓練的人員進行，以符合適用的實作法規。

如果將設備用於非製造商指定的用途時，可能會造成設備所提供的保護功能受損。

**POZOR:** Než začnete instalovat, konfigurovat či provozovat tento výrobek nebo provádět jeho údržbu, přečtěte si tento dokument a dokumenty uvedené v části Dodatečné zdroje ohledně instalace, konfigurace a provozu tohoto zařízení. Uživatelé se musejí vedle požadavků všech relevantních vyhlášek, zákonů a norem nutně seznámit také s pokyny pro instalaci a elektrické zapojení.

Činnosti zahrnující instalaci, nastavení, uvedení do provozu, užívání, montáž, demontáž a údržbu musí vykonávat vhodně proškolený personál v souladu s příslušnými prováděcími předpisy.

Pokud se toto zařízení používá způsobem neodpovídajícím specifikaci výrobce, může být narušena ochrana, kterou toto zařízení poskytuje.

**UWAGA:** Przed instalacją, konfiguracją, użytkowaniem lub konserwacją tego produktu należy przeczytać niniejszy dokument oraz wszystkie dokumenty wymienione w sekcji Dodatkowe źródła omawiające instalację, konfigurację i procedury użytkowania tego urządzenia. Użytkownicy mają obowiązek zapoznać się z instrukcjami dotyczącymi instalacji oraz oprzewodowania, jak również z obowiązującymi kodeksami, prawem i normami.

Działania obejmujące instalację, regulację, przekazanie do użytkowania, użytkowanie, montaż, demontaż oraz konserwację muszą być wykonywane przez odpowiednio przeszkolony personel zgodnie z obowiązującym kodeksem postępowania.

Jeśli urządzenie jest użytkowane w sposób inny niż określony przez producenta, zabezpieczenie zapewniane przez urządzenie może zostać ograniczone.

**OBSI!** Läs detta dokument samt dokumentet, som står listat i avsnittet Övriga resurser, om installation, konfigurering och drift av denna utrustning innan du installerar, konfigurerar eller börjar använda eller utföra underhållsarbete på produkten. Användare måste bekanta sig med instruktioner för installation och kabeldragning, förutom krav enligt gällande koder, lagar och standarder.

Åtgärder som installation, justering, service, användning, montering, demontering och underhållsarbete måste utföras av personal med lämplig utbildning enligt lämpligt bruk.

Om denna utrustning används på ett sätt som inte anges av tillverkaren kan det hända att utrustningens skyddsanordningar försätts ur funktion.

**LET OP:** Lees dit document en de documenten die genoemd worden in de paragraaf Aanvullende informatie over de installatie, configuratie en bediening van deze apparatuur voordat u dit product installeert, configureert, bedient of onderhoudt. Gebruikers moeten zich vertrouwd maken met de installatie en de bedringsinstructies, naast de vereisten van alle toepasselijke regels, wetten en normen.

Activiteiten zoals het installeren, afstellen, in gebruik stellen, gebruiken, monteren, demonteren en het uitvoeren van onderhoud mogen uitsluitend worden uitgevoerd door hiervoor opgeleid personeel en in overeenstemming met de geldende praktijkregels.

Indien de apparatuur wordt gebruikt op een wijze die niet is gespecificeerd door de fabrikant, dan bestaat het gevaar dat de beveiliging van de apparatuur niet goed werkt.

Rockwell Automation recognizes that some of the terms that are currently used in our industry and in this publication are not in alignment with the movement toward inclusive language in technology. We are proactively collaborating with industry peers to find alternatives to such terms and making changes to our products and content. Please excuse the use of such terms in our content while we implement these changes.

## Environment and Enclosure



**ATTENTION:** This equipment is intended for use in a Pollution Degree 2 industrial environment, in overvoltage Category II applications (as defined in EN/IEC 0664-1), at altitudes up to 2000 m (6562 ft) without derating.

This equipment is not intended for use in residential environments and may not provide adequate protection to radio communication services in such environments.

This equipment is supplied as open-type equipment for indoor use. It must be mounted within an enclosure that is suitably designed for those specific environmental conditions that will be present and appropriately designed to help prevent personal injury resulting from accessibility to live parts. The enclosure must have suitable flame-retardant properties to help prevent or minimize the spread of flame, complying with a flame spread rating of 5V A or be approved for the application if nonmetallic. The interior of the enclosure must be accessible only by the use of a tool. Subsequent sections of this publication may contain more information regarding specific enclosure type ratings that are required to comply with certain product safety certifications.

In addition to this publication, see the following:

- Industrial Automation Wiring and Grounding Guidelines, publication [1770-4.1](#), for additional installation requirements.
- NEMA Standard 250 and EN/IEC 60529, as applicable, for explanations of the degrees of protection provided by enclosures.

## Prevent Electrostatic Discharge



**ATTENTION:** This equipment is sensitive to electrostatic discharge, which can cause internal damage and affect normal operation. Follow these guidelines when you handle this equipment:

- Touch a grounded object to discharge potential static.
- Wear an approved grounding wriststrap.
- Do not touch connectors or pins on component boards.
- Do not touch circuit components inside the equipment.
- Use a static-safe workstation, if available.
- Store the equipment in appropriate static-safe packaging when not in use.
- This equipment is certified for use only within the surrounding air temperature range of -20...+55 °C (-4...+131 °F). The equipment must not be used outside of this range.
- Use only a soft dry anti-static cloth to wipe down equipment. Do not use any cleaning agents.



**ATTENTION:** Read this document and the documents that are listed in the Additional Resources section about installation, configuration, and operation of this equipment before you install, configure, operate, or maintain this product. Users are required to familiarize themselves with installation and wiring instructions in addition to requirements of all applicable codes, laws, and standards.

Installation, adjustments, putting into service, use, assembly, disassembly, and maintenance are required to be carried out by suitably trained personnel in accordance with applicable code of practice. In case of malfunction or damage, no attempts at repair should be made. The module should be returned to the manufacturer for repair. Do not dismantle the module.

## Before You Begin


The POINT I/O™ module with 8 configurable 24V DC points and DeviceLogix™ is a 24V DC I/O module with eight self-configuring points and DeviceLogix capabilities. Each of the I/O points can be a DC input or output. The module supports removal and insertion under power (RIUP), auto-address, and auto-baud in compliance with the POINTBus™ backplane.

See [Figure 1](#) and [Figure 2](#) to familiarize yourself with major parts of the module, noting that the wiring base assembly is one of the following:

- 1734-TB or 1734-TBS POINT I/O two-piece terminal base, which includes the 1734-RTB or 1734-RTBS removable terminal block and 1734-MB mounting base
- 1734-TOP or 1734-TOPS POINT I/O one-piece terminal base


The 1734-8CF6DLX module is not compatible with 1734-TB3, 1734-TB3S, 1734-TOP3, and 1734-TOP3S terminal bases.

Figure 1 - POINT I/O Module with 1734-TB or 1734-TBS Terminal Base

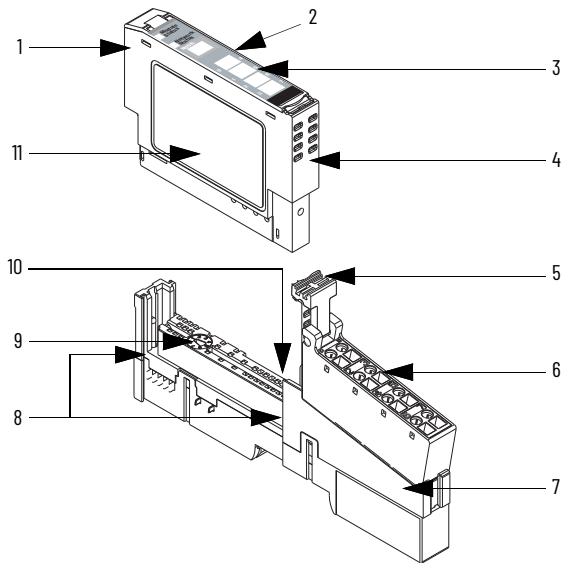

	Description		Description
1	Module locking mechanism	7	Mounting base
2	Module wiring diagram (behind)	8	Interlocking side pieces
3	Slide-in writable label	9	Mechanical keying (orange)
4	Insertable I/O module	10	DIN rail locking screw (orange)
5	Removable Terminal Block (RTB) handle	11	Product information label
6	RTB with screw (1734-RTB) or spring clamp (1734-RTBS)		

Figure 2 - POINT I/O Module with 1734-TOP or 1734-TOPS Terminal Base

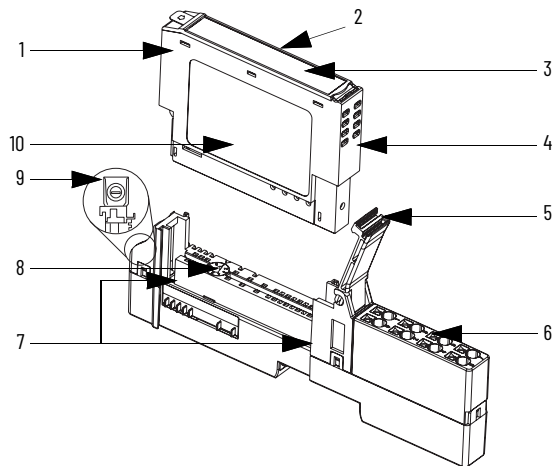

	Description		Description
1	Module locking mechanism	6	One-piece terminal base with screw or spring clamp
2	Module wiring diagram (behind)	7	Interlocking side pieces
3	Slide-in writable label	8	Mechanical keying (orange)
4	Insertable I/O module	9	DIN rail locking screw (orange)
5	Terminal base handle	10	Product information label

## Install the Mounting Base

To install the mounting base on the DIN rail (Allen-Bradley® part number 199-DR1; 46277-3; EN50022), proceed as follows:




**ATTENTION:** This product is grounded through the DIN rail to chassis ground. Use zinc-plated chromate-passivated steel DIN rail to assure proper grounding. The use of other DIN rail materials (for example, aluminum or plastic) that can corrode, oxidize, or are poor conductors, can result in improper or intermittent grounding. Secure DIN rail to mounting surface approximately every 200 mm (7.8 in.) and use end-anchors appropriately. Be sure to ground the DIN rail properly. See Industrial Automation Wiring and Grounding Guidelines, publication [1770-4.1](#), for more information.



**WARNING:** When used in a Class I Division 2, hazardous location, this equipment must be mounted in a suitable enclosure with proper wiring method that complies with the governing electrical codes.

1. Position the mounting base vertically above the installed units (adapter, power supply, or existing module).

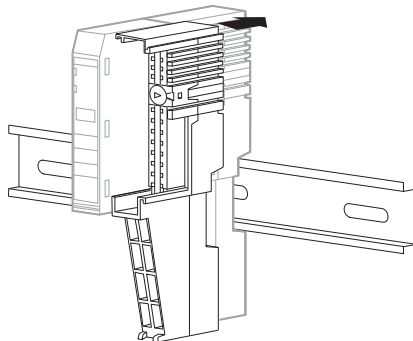

2. Slide the mounting base down allowing the interlocking side pieces to engage the adjacent module or adapter.
3. Press firmly to seat the mounting base on the DIN rail. The mounting base snaps into place. Be sure that the orange DIN rail locking screw is in the horizontal position and that it has engaged the DIN rail.



**ATTENTION:** Use the end cap from your adapter or interface module to cover the exposed interconnections on the last mounting base on the DIN rail. Failure to do so could result in equipment damage or injury from electric shock.

## Install the Module


The module can be installed before or after base installation. Make sure that the mounting base is correctly keyed before installing the module into the mounting base. In addition, make sure that the mounting base locking screw is positioned horizontally referenced to the base.




**WARNING:** When you insert or remove the module while backplane power is on, an electric arc can occur. This could cause an explosion in hazardous location installations. Be sure that power is removed or the area is nonhazardous before proceeding. Repeated electrical arcing causes excessive wear to contacts on both the module and its mating connector. Worn contacts may create electrical resistance that can affect module operation.

### POINT I/O Terminal Bases

1734-TB Base

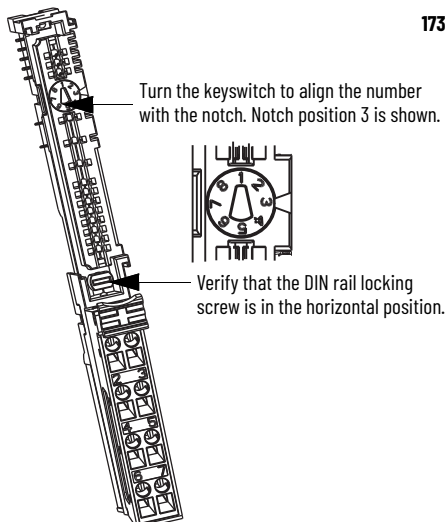


1734-TOP Base

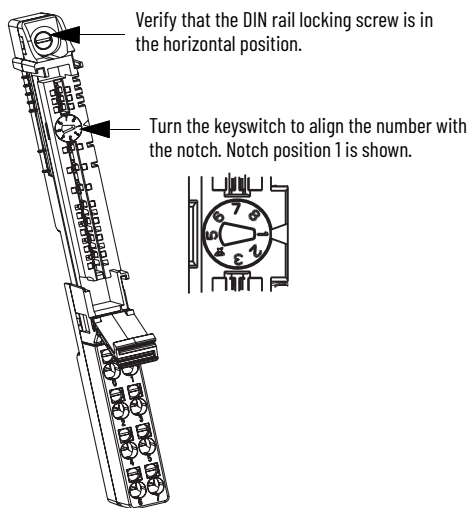

To install the module, proceed as follows.

1. Use a bladed screwdriver to rotate the keyswitch on the mounting base clockwise until the number required for the type of module being installed aligns with the notch in the base.
2. Verify that the DIN rail locking screw is in the horizontal position. You cannot insert the module if the locking mechanism is unlocked.

3. Insert the module straight down into the mounting base and press to secure. The module locks into place.

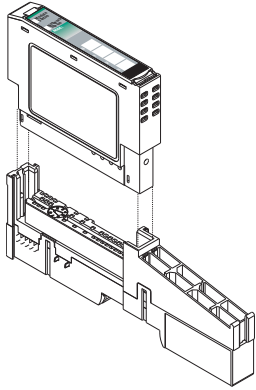


## Install the Removable Terminal Block

An RTB is supplied with your wiring base assembly. To remove, pull up on the RTB handle. This allows the mounting base to be removed and replaced as necessary without removing any of the wiring. To reinsert the RTB, proceed as follows.



**WARNING:** When you connect or disconnect the removable terminal block (RTB) with field-side power applied, an electric arc can occur. This can cause an explosion in hazardous location installations. Be sure that power is removed or the area is nonhazardous before proceeding.


1. Insert the end opposite the handle into the base unit. This end has a curved section that engages with the wiring base.
2. Rotate the terminal block into the wiring base until it locks itself in place.
3. If an I/O module is installed, snap the RTB handle into place on the module.

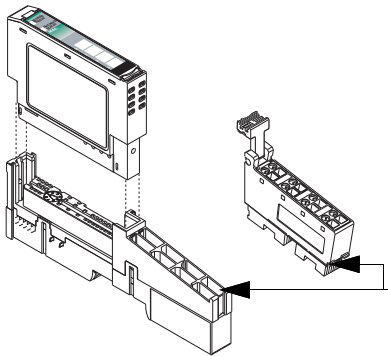

Hook the RTB end into the mounting base end, and rotate until it locks into place.




**WARNING:** For 1734-RTBS, to latch and unlatch the wire, insert a bladed screwdriver (catalog number 1492-N90 - 3 mm [0.12 in.] diameter blade) into the opening at approximately 73° (blade surface is parallel with top surface of the opening) and push up gently.

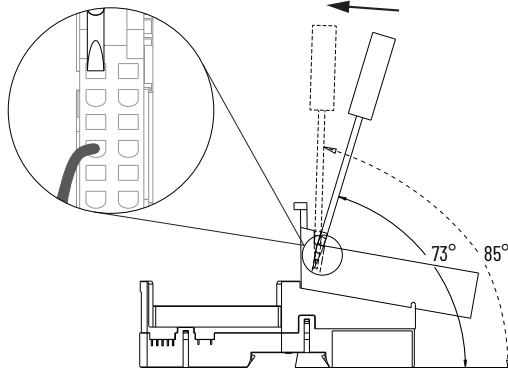



**WARNING:** For 1734-TOPS, to latch and unlatch the wire, insert a bladed screwdriver (catalog number 1492-N90 - 3 mm [0.12 in.] diameter blade) into the opening at approximately 97° (blade surface is parallel with top surface of the opening) and press in (do not push up or down).

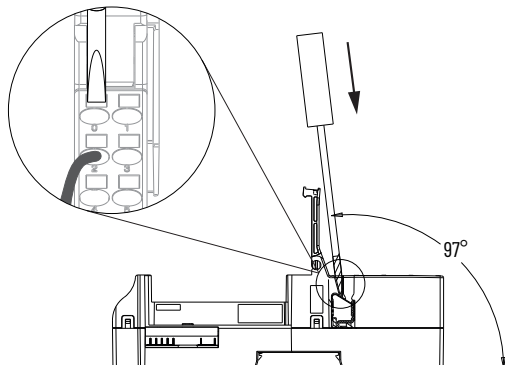

## Remove a Mounting Base

To remove a mounting base, you must remove any installed module and the module that is installed in the base to the right. Remove the RTB, if wired.



**WARNING:** When you insert or remove the module while backplane power is on, an electric arc can occur. This could cause an explosion in hazardous location installations.

Be sure that power is removed or the area is nonhazardous before proceeding. Repeated electrical arcing causes excessive wear to contacts on both the module and its mating connector. Worn contacts may create electrical resistance that can affect module operation.



**WARNING:** When you connect or disconnect the Removable Terminal Block (RTB) with field side power applied, an electric arc can occur. This could cause an explosion in hazardous location installations.

Be sure that power is removed or the area is nonhazardous before proceeding.

1. Unlatch the RTB handle on the I/O module.
2. Pull on the RTB handle to remove the RTB.
3. Press the module lock on the top of the module.
4. Pull on the I/O module to remove from the base.
5. Repeat steps 1, 2, 3, and 4 for the module to the right.
6. Use a small-bladed screwdriver to rotate the orange base locking screw to a vertical position. This releases the locking mechanism.
7. Lift straight up to remove.

## Wire the Module

To wire the module, see the following diagrams and tables.

Figure 3 - 1734-8CF6DLX Module

**Note:** Voltage and current to the module is applied through the adapter, the 1734-FPD module, or the 1734-EP24DC module.  
V = 10...28.8V DC


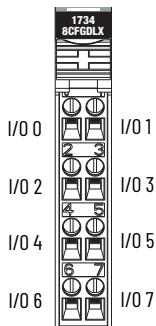


Figure 4 - Wiring Diagram

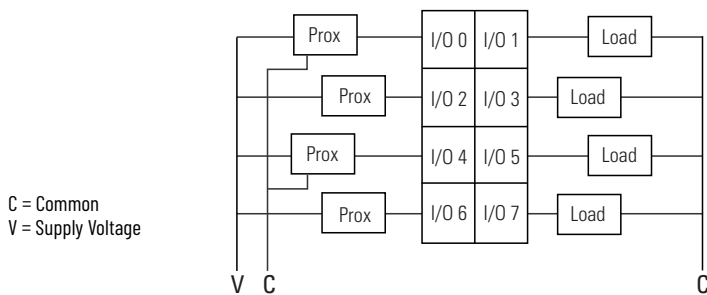

If a connection to Common or the Supply Voltage is required for two- or three-wire devices, then a 1734-CTM or 1734-VTM can be used. Each I/O point is either Input or Output.

Table 1 - Module Wiring

Channel	Terminal Number		
	I/O	Common	Voltage
0	0	External <sup>(1)</sup>	External <sup>(2)</sup>
1	1		
2	2		
3	3		
4	4		
5	5		
6	6		
7	7		

10/28.8V DC is supplied through the internal power bus.

- (1) Common connections require an external connection, such as a 1734-CTM module.
- (2) Supply Voltage connections require an external connection such as a 1734-VTM module.

## Communicate with Your Module

POINT I/O modules send (produce) and receive (consume) I/O data (messages). You map this data onto the processor memory.

I/O messages are sent to (consumer) and received from (producer) the POINT I/O modules. These messages are mapped into the processor or scanner memory. Each module produces 1 byte, 8, or 20 bytes of input data (scanner Rx) based on which Producer assembly is selected. The default setup is 20 bytes. It consumes 1 byte, 8, or 20 bytes of I/O data (scanner Tx).

In the Studio 5000 Logix Designer® application, the default tag is AdapterName:SlotNumber:I.Data. The data type is a SINT.

### Default Data Map - Producer Assembly Instance 101

Message Size: 20 Bytes								
Bit	7	6	5	4	3	2	1	0
Data [0]	Pt 07	Pt 06	Pt 05	Pt 04	Pt 03	Pt 02	Pt 01	Pt 00
Data [1]	PNB 07	PNB 06	PNB 05	PNB 04	PNB 03	PNB 02	PNB 01	PNB 00
Data [2]	Reserved						Owned	LogicEn
Data [3]	PM7	PM6	PM5	PM4	PM3	PM2	PM1	PM0
Data [4]	Produce Network Analog Word 0							
Data [5]	Produce Network Analog Word 0							
Data [6]	Produce Network Analog Word 1							
Data [7]	Produce Network Analog Word 1							
Data [8]	Produce Network Analog Word 2							
Data [9]	Produce Network Analog Word 2							
Data [10]	Produce Network Analog Word 3							
Data [11]	Produce Network Analog Word 3							
Data [12]	Produce Network Analog Word 4							
Data [13]	Produce Network Analog Word 4							
Data [14]	Produce Network Analog Word 5							
Data [15]	Produce Network Analog Word 5							
Data [16]	Produce Network Analog Word 6							
Data [17]	Produce Network Analog Word 6							

**Default Data Map – Producer Assembly Instance 101 (Continued)**

<b>Message Size: 20 Bytes</b>	
Data [18]	Produce Network Analog Word 7
Data [19]	
Where:	Pt = State of the output point PNB = Produce Network Bit PM = Peer Missing (each bit represents the presence of a configured peer) Owned = Owned by a master When set to 0, the module is producing data without a master. When set to 1, the module is producing while being owned by a master. LogicEn = Logic Enabled (0 = Logic disabled, 1 = Logic enabled)

You can select other Producer assemblies:

- Producer Assembly Instance 4 is the first byte of Producer Assembly Instance 101 (Data [0]).
- Producer Assembly Instance 111 is the first 8 bytes of Producer Assembly Instance 101 (Data [0]..[7]).

In the Studio 5000 Logix Designer application, the default tags are:

- AdapterName:SlotNumber:I.Data
- AdapterName:SlotNumber:I.LogicDefinedData
- AdapterName:SlotNumber:I.Status.LogicEnabled
- AdapterName:SlotNumber:I.Status.Owned
- AdapterName:SlotNumber:I.PeerMissing
- AdapterName:SlotNumber:I.LogicDefinedIntData[0..7]

**Default Data Map – Consumer Assembly Instance 102**

<b>Message Size: 20 Bytes</b>								
<b>Bit</b>	<b>7</b>	<b>6</b>	<b>5</b>	<b>4</b>	<b>3</b>	<b>2</b>	<b>1</b>	<b>0</b>
Data [0]	Pt 07	Pt 06	Pt 05	Pt 04	Pt 03	Pt 02	Pt 01	Pt 00
Data [1]	CNB 07	CNB 06	CNB 05	CNB 04	CNB 03	CNB 02	CNB 01	CNB 00
Data [2]	Reserved							
Data [3]	Reserved							
Data [4]	Consume Network Analog Word 0							
Data [5]	Consume Network Analog Word 0							
Data [6]	Consume Network Analog Word 1							
Data [7]	Consume Network Analog Word 1							
Data [8]	Consume Network Analog Word 2							
Data [9]	Consume Network Analog Word 2							
Data [10]	Consume Network Analog Word 3							
Data [11]	Consume Network Analog Word 3							
Data [12]	Consume Network Analog Word 4							
Data [13]	Consume Network Analog Word 4							
Data [14]	Consume Network Analog Word 5							
Data [15]	Consume Network Analog Word 5							
Data [16]	Consume Network Analog Word 6							
Data [17]	Consume Network Analog Word 6							
Data [18]	Consume Network Analog Word 7							
Data [19]	Consume Network Analog Word 7							
Where:	Pt = State of the output point CNB = Consume Network Bit							

You can select other Consumer assemblies:

- Consumer Assembly Instance 34 is the first byte of Consumer Assembly Instance 102 (Data [0]).
- Consumer Assembly Instance 112 is the first 8 bytes of Consumer Assembly Instance 102 (Data [0]..[7]).

In the Studio 5000 Logix Designer application, the default tags are:

- AdapterName:SlotNumber:O.Data
- AdapterName:SlotNumber:O.LogicDefinedData
- AdapterName:SlotNumber:O.LogicDefinedIntData[0..7]

**Default Data Map - Configuration Assembly Instance 123**

<b>Message Size: 48 Bytes</b>								
<b>Bit</b>	<b>7</b>	<b>6</b>	<b>5</b>	<b>4</b>	<b>3</b>	<b>2</b>	<b>1</b>	<b>0</b>
Data [0]	Group Off20n Input filter							
Data [1]								
Data [2]	Group On20ff Input filter							
Data [3]								
Data [4]	FitM 7	FitM 6	FitM 5	FitM 4	FitM 3	FitM 2	FitM 1	FitM 0
Data [5]	FitV 7	FitV 6	FitV 5	FitV 4	FitV 3	FitV 2	FitV 1	FitV 0
Data [6]	IdIM 7	IdIM 6	IdIM 5	IdIM 4	IdIM 3	IdIM 2	IdIM 1	IdIM 0
Data [7]	IdIV 7	IdIV 6	IdIV 5	IdIV 4	IdIV 3	IdIV 2	IdIV 1	IdIV 0
Data [8]	Reserved				RACK	CFO	DM	MP
Data [9]	Reserved							
Data [10]	Masterless Producer Assembly Instance (0, 4, 101, 111)							
Data [11]								
Data [12]	Masterless Producer EPR (ms)							
Data [13]								
Data [14]	Masterless Producer PIT (ms)							
Data [15]								
Data [16]	Peer 0 - Slot/MacID							
Data [17]	Peer 0 - Consume Message Length (bytes)							
Data [18]	Peer 0 - EPR (ms)							
Data [19]								
Data [20]	Peer 1 - Slot/MacID							
Data [21]	Peer 1 - Consume Message Length (bytes)							
Data [22]	Peer 1 - EPR (ms)							
Data [23]								
Data [24]	Peer 2 - Slot/MacID							
Data [25]	Peer 2 - Consume Message Length (bytes)							
Data [26]	Peer 2 - EPR (ms)							
Data [27]								
Data [28]	Peer 3 - Slot/MacID							
Data [29]	Peer 3 - Consume Message Length (bytes)							
Data [30]	Peer 3 - EPR (ms)							
Data [31]								
Data [32]	Peer 4 - Slot/MacID							
Data [33]	Peer 4 - Consume Message Length (bytes)							
Data [34]	Peer 4 - EPS (ms)							
Data [35]								
Data [36]	Peer 5 - Slot/MacID							
Data [37]	Peer 5 - Consume Message Length (bytes)							
Data [38]	Peer 5 - EPR (ms)							
Data [39]								
Data [40]	Peer 6 - Slot/MacID							
Data [41]	Peer 6 - Consume Message Length (bytes)							
Data [42]	Peer 6 - EPR (ms)							
Data [43]								
Data [44]	Peer 7 - Slot/MacID							
Data [45]	Peer 7 - Consume Message Length (bytes)							

Default Data Map – Configuration Assembly Instance 123 (Continued)

<b>Message Size: 48 Bytes</b>	
Data [46]	Peer 7 - EPR (ms)
Data [47]	
Where:	Filter = 0...65 ms (1 ms = Default) FitM = Fault Mode (0 = Fault value (default), 1 = Hold last state) FitV = Fault Value (0 = Off (default), 1 = On) IdIM = Idle Mode (0 = Idle value (default), 1 = Hold last state) IdIV = Idle Value (0 = Off (default), 1 = On) RACK = Produce with Rack Assembly 4 and Consume Rack Assembly 34 (0 = Disabled (default), 1 = Enabled) CFO = DeviceLogix Communication Fault Override of Outputs 1 = Enabled. When enabled, the DeviceLogix program continues to control the outputs even in the event of a communication fault. 0 = Disabled (default). When disabled, the outputs follow the Fault and Idle settings. DM = Dependent Mode MP = Masterless Produce 0 = Disabled (default), 1 = Enabled. When enabled, the module will begin producing data at powerup and after a connection with a controller is terminated. EPR = Expected Packet Rate PIT = Production Inhibit Time Slot/MacID = Address of peer

You must configure the 1734-8CFGDLX module through the RSNetWorx™ for DeviceNet application.

### Interpret the Status Indicators

See [Figure 5](#) and [Table 2](#) for information on how to interpret the status indicators.

Figure 5 - Module Status Indicators

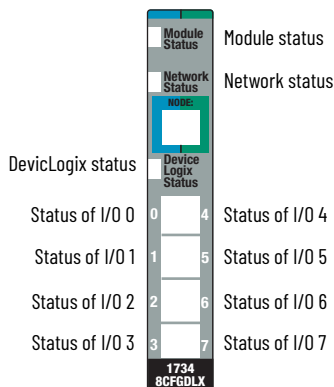


Table 2 - Indicator Status for the Module

Indicator	State	Description
Module status	Off	No power is applied to the device.
	Green	The device is operating normally.
	Flashing green	The device needs commissioning due to configuration missing, incomplete, or incorrect.
	Flashing red	A recoverable fault is present.
	Red	An unrecoverable fault occurred that may require device replacement.
	Flashing red/green	The device is in self-test mode.
Network status	Off	The device is not online. - The device has not completed the dup_MAC_id test. - The device is not powered - Check the module status indicator.
	Flashing green	The device is online but has no connections in the established state.
	Green	The device is online and has connections in the established state.
	Flashing red	One or more I/O connections are in a timed-out state.
	Red	Critical link failure - Failed communication device. The device has detected an error that prevents it from communicating on the network.
DeviceLogix status	Off	A DeviceLogix program is not controlling the outputs.
	Green	A DeviceLogix program is controlling the outputs.
I/O status	Off	The input or output is in the off state.
	Yellow	The input or output is in the on state.

## Specifications

### Input Specifications - POINT I/O Module 1734-8CFGDLX DC Input

Attribute	Value
On-state voltage, min	11V DC
On-state current, min	2.0 mA
On-state current, max	5.0 mA
Off-state voltage, max	5V DC
Off-state current, min	1.5 mA
Input filter	Value selectable in milliseconds (ms), in resolutions of 1. The valid range for the value is 0...65 ms. The default value is 1 ms.
OFF to ON filter, min	0 ms
OFF to ON filter, max	65 ms
ON to OFF filter, min	0 μs
ON to OFF filter, max	65 ms

### Output Specifications - POINT I/O Module 1734-8CFGDLX DC Output

Attribute	Value
On-state voltage range, min	10V DC
On-state voltage range, max	28.8V DC
On-state voltage range, nom	24V DC
On-state voltage drop, max	0.4V DC
On-state current, max	0.5 A
Off-state leakage, max	0.5 mA
Module current (all outputs), max	3.0 A
Surge current - For 100 ms, repeatable every 2 s, max	1.0 A

### General Specifications

Attribute	Value
Module location	1734-TB, 1734-TBS, 1734-TOP, 1734-TOPS wiring base assembly
Terminal base screw torque	0.5...0.6 N•m (5...7 lb•in)
Supply voltage, max	28.8V DC
POINTBus current, max	100 mA @ 5V DC
Dimensions (HxWxD), approx.	56.6 x 12.1 x 77.5 mm (2.23 x 0.48 x 3.05 in.)
Weight, approx.	34 g (1.20 oz.)
Wiring category <sup>(1) (2)</sup>	1 - on signal ports
Wire size	Determined by the installed terminal block
Enclosure type rating	None (open-style)
Keyswitch position	1
Reverse polarity protection	Yes

(1) Use this conductor category information for planning conductor routing as described in Industrial Automation Wiring and Grounding Guidelines, publication [1770-4.1](#).

(2) Use this Conductor Category information for planning conductor routing as described in the appropriate System Level Installation Manual.

### Environmental Specifications

Attribute	Value
Temperature, operating	IEC 60068-2-1 (Test Ad, Operating Cold), IEC 60068-2-2 (Test Bd, Operating Dry Heat), IEC 60068-2-14 (Test Nb, Operating Thermal Shock): -20 °C...+55 °C (-4 °F...+131 °F)
Temperature, surrounding air, max	55 °C (131 °F)
Temperature, nonoperating	IEC 60068-2-1 (Test Ab, Unpackaged Nonoperating Cold), IEC 60068-2-2 (Test Bb, Unpackaged Nonoperating Dry Heat), IEC 60068-2-14 (Test Na, Unpackaged Nonoperating Thermal Shock): -40...+85 °C (-40...+185 °F)
Relative humidity	IEC 60068-2-30 (Test Db, Unpackaged Damp Heat): 5...95% noncondensing
Vibration	IEC60068-2-6 (Test Fc, Operating): 5 g @ 10...500 Hz
Shock, operating	EC 60068-2-27 (Test Ea, Unpackaged Shock): 30 g

## Environmental Specifications (Continued)

Attribute	Value
Shock, nonoperating	EC 60068-2-27 (Test Ea, Unpackaged Shock): 50 g
Emissions	CISPR 11: Group 1, Class A
ESD immunity	IEC6100-4-2: 6 kV contact discharges 8 kV air discharges
Radiated RF immunity	IEC 61000-4-3: 10V/m with 1 kHz sine-wave 80% AM from 80...2000 MHz 10V/m with 200 Hz 50% pulse 100% AM @ 900 MHz 10V/m with 200 Hz 50% pulse 100% AM @ 1890 MHz 10V/m with 1 kHz sine-wave 80% AM from 2000...2700 MHz
EFT/B immunity	IEC 61000-4-4: ±3 kV at 5 kHz on signal ports
Surge transient immunity	IEC 61000-4-5: ±1 kV line-line (DM) and ±2 kV line-earth (CM) on signal ports
Conducted RF immunity	IEC61000-4-6: 10V rms with 1 kHz sine-wave 80%AM from 150 kHz...80 MHz

## Certifications

Certification (when product is marked) <sup>(1)</sup>	Value
UK and CE	UK Statutory Instrument 2016 No. 1091 and European Union 2014/30/EU EMC Directive, compliant with: EN 61326-1; Meas./Control/Lab., Industrial Requirements EN 61000-6-2; Industrial Immunity EN 61000-6-4; Industrial Emissions EN 61131-2; Programmable Controllers (Cl. 8, Zone A & B)  UK Statutory Instrument 2012 No. 3032 and European Union 2011/65/EU RoHS, compliant with: EN IEC 63000; Technical documentation
RCM	Australian Radiocommunications Act, compliant with: EN 61000-6-4; Industrial Emissions.
KC	Korean Registration of Broadcasting and Communications Equipment, compliant with: Article 58-2 of Radio Waves Act, Clause 3
Morocco	Arrêté ministériel n° 6404-15 du 29 ramadan 1436

(1) See the Product Certification link at [rok.auto/certifications](http://rok.auto/certifications) for Declaration of Conformity, Certificates, and other certification details.

## Additional Resources

For more information on the products that are described in this publication, use these resources. You can view or download publications at [rok.auto/literature](http://rok.auto/literature).

Resource	Description
POINT I/O Modules Selection Guide, publication <a href="#">1734-SG001</a>	Provides POINT I/O adapters and module specifications.
POINT I/O and ArmorPOINT I/O DeviceLogix Modules User Manual, publication <a href="#">1734-UM015</a>	Provides a detailed description of module functionality, configuration, and usage for POINT I/O and ArmorPOINT® I/O configurable DeviceLogix modules.
Industrial Automation Wiring and Grounding Guidelines, publication <a href="#">1770-4.1</a>	Provides general guidelines for installing a Rockwell Automation industrial system.
Product Certifications website, <a href="http://rok.auto/certifications">rok.auto/certifications</a>	Provides declarations of conformity, certificates, and other certification details.

## Rockwell Automation Support

Use these resources to access support information.

<b>Technical Support Center</b>	Find help with how-to videos, FAQs, chat, user forums, Knowledgebase, and product notification updates.	<a href="http://rok.auto/support">rok.auto/support</a>
<b>Local Technical Support Phone Numbers</b>	Locate the telephone number for your country.	<a href="http://rok.auto/phonesupport">rok.auto/phonesupport</a>
<b>Technical Documentation Center</b>	Quickly access and download technical specifications, installation instructions, and user manuals.	<a href="http://rok.auto/techdocs">rok.auto/techdocs</a>
<b>Literature Library</b>	Find installation instructions, manuals, brochures, and technical data publications.	<a href="http://rok.auto/literature">rok.auto/literature</a>
<b>Product Compatibility and Download Center (PCDC)</b>	Download firmware, associated files (such as AOP, EDS, and DTM), and access product release notes.	<a href="http://rok.auto/pcdc">rok.auto/pcdc</a>

## Documentation Feedback

Your comments help us serve your documentation needs better. If you have any suggestions on how to improve our content, complete the form at [rok.auto/docfeedback](http://rok.auto/docfeedback).





## Waste Electrical and Electronic Equipment (WEEE)



At the end of life, this equipment should be collected separately from any unsorted municipal waste.

Rockwell Automation maintains current product environmental compliance information on its website at [rok.auto/pec](http://rok.auto/pec).

Rockwell Otomasyon Ticaret A.Ş. Kar Plaza İş Merkezi E Blok Kat:6 34752 İçerenköy, İstanbul, Tel: +90 (216) 5698400 EEE Yönetmeliğine Uygundur

Connect with us.    

**rockwellautomation.com** — expanding **human possibility**<sup>®</sup>

AMERICAS: Rockwell Automation, 1201 South Second Street, Milwaukee, WI 53204-2496 USA, Tel: (1) 414.382.2000

EUROPE/MIDDLE EAST/AFRICA: Rockwell Automation NV, Pegasus Park, De Kleetlaan 12a, 1831 Diegem, Belgium, Tel: (32) 2663 0600

ASIA PACIFIC: Rockwell Automation SEA Pte Ltd, 2 Corporation Road, #04-05, Main Lobby, Corporation Place, Singapore 618494, Tel: (65) 6510 6608

UNITED KINGDOM: Rockwell Automation Ltd., Pitfield, Kiln Farm, Milton Keynes, MK11 3DR, United Kingdom, Tel: (44)(1908) 838-800

Allen-Bradley, ArmorPOINT, DeviceLogix, expanding human possibility, FactoryTalk, POINT I/O, POINTBus, Rockwell Automation, RSNetWorx for DeviceNet, Studio 5000 Logix Designer, and TechConnect are trademarks of Rockwell Automation, Inc.

Trademarks not belonging to Rockwell Automation are property of their respective companies.

Publication 1734-IN039E-EN-P - September 2025 | Supersedes Publication 1734-IN039D-EN-P - December 2024

Copyright © 2025 Rockwell Automation, Inc. All rights reserved.